
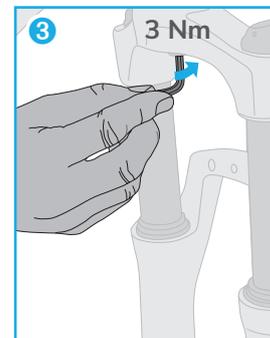
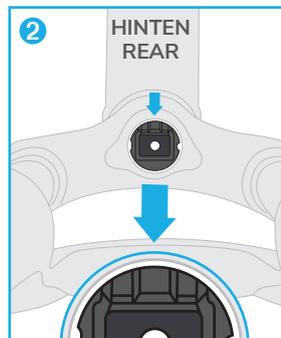
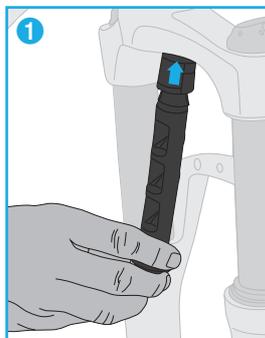


MONKEY LINK





27,5"-29" FENDERSET.

MONTAGEANLEITUNG · MOUNTING INSTRUCTION VORNE · FRONT



KONUSMONTAGE · MOUNTING THE CONE

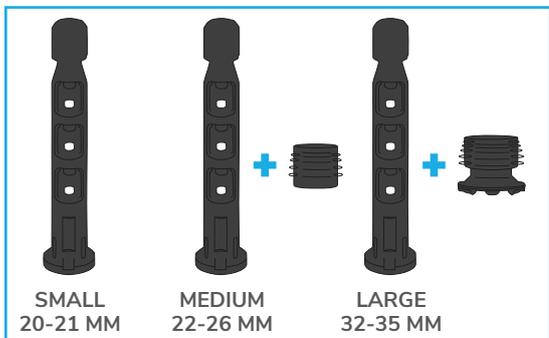



MONTAGE VORDERRADSCHUTZ · MOUNTING THE FRONT MUDGUARD

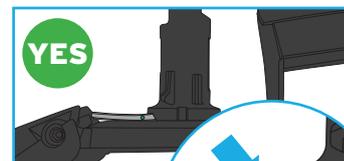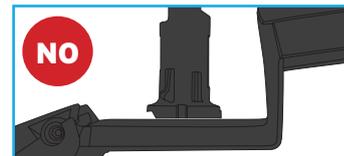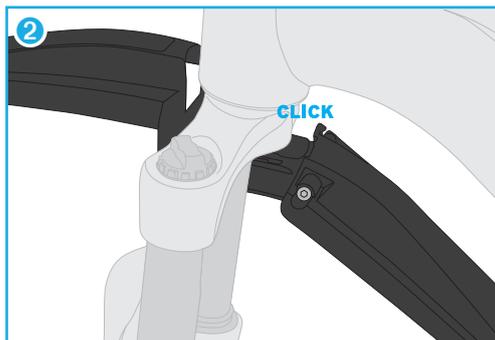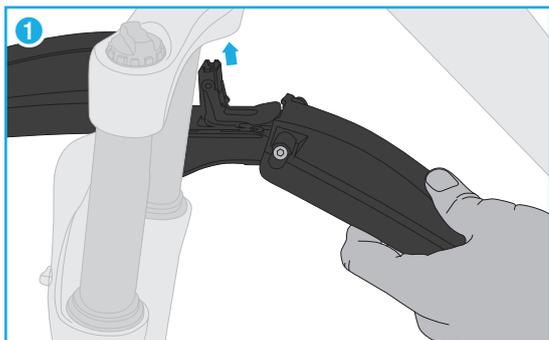

DEMONTAGE VORDERRADSCHUTZ · REMOVING THE FRONT MUDGUARD

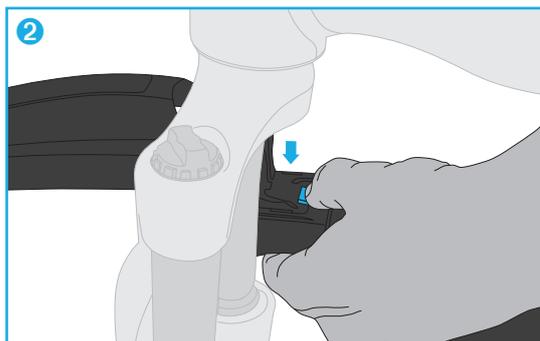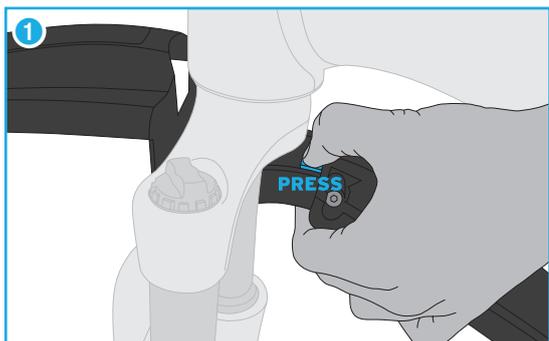

WINKELEINSTELLUNG · ANGLE SETTING

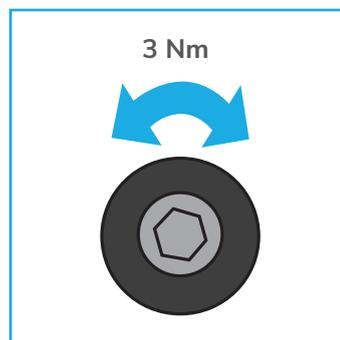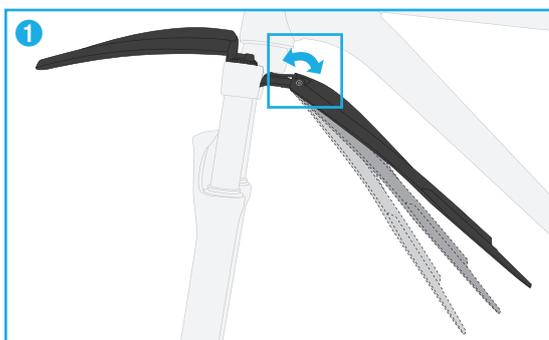


MONKEY LINK


27,5"-29" FENDERSET.

MONTAGEANLEITUNG · MOUNTING INSTRUCTION HINTEN · REAR


MONTAGE HINTERRADSCHUTZ · MOUNTING THE REAR MUDGUARD

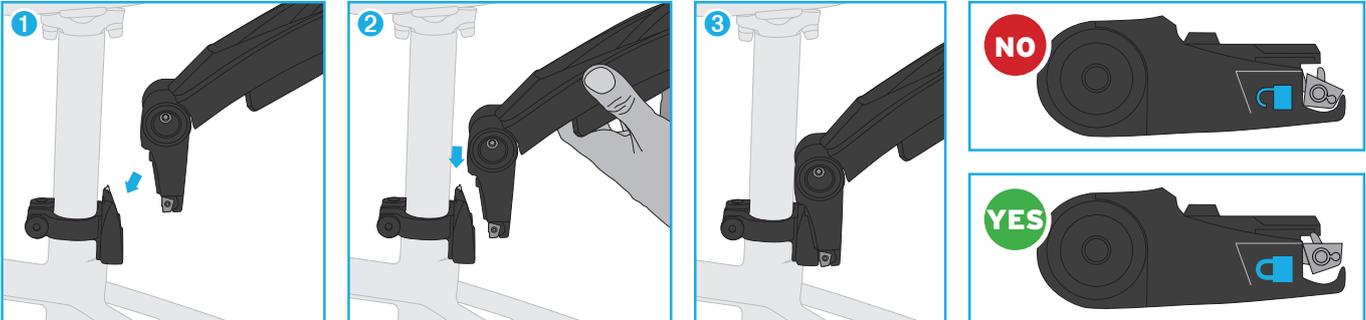


DEMONTAGE HINTERRADSCHUTZ · REMOVING THE REAR MUDGUARD

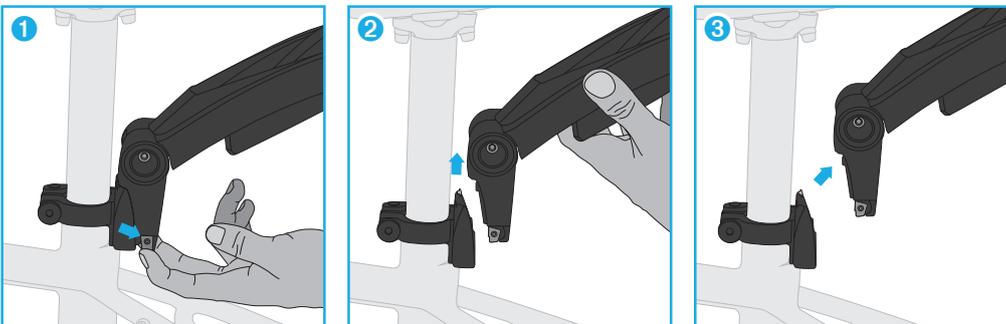


WINKELEINSTELLUNG · ANGLE SETTING

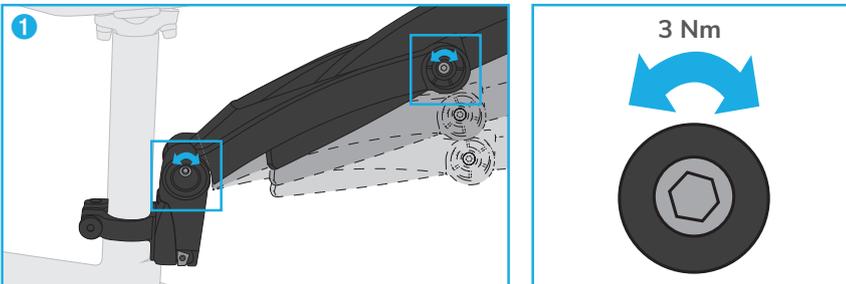


AUSBAU LICHT HINTERRADSCHUTZ (NUR BEI RECHARGE-VERSION) REMOVING THE REAR MUDGUARD LIGHT (ONLY FOR THE RECHARGE-VERSION)

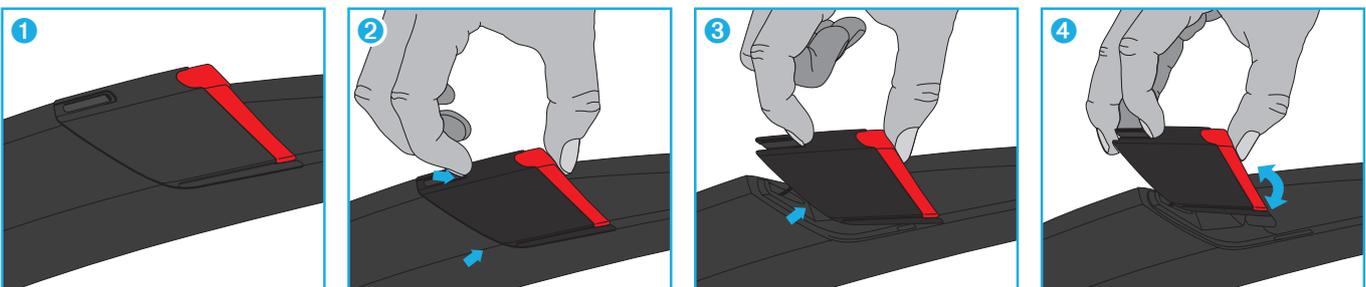

AUFLADEN (NUR BEI RECHARGE-VERSION) RECHARGE (ONLY FOR THE RECHARGE-VERSION)

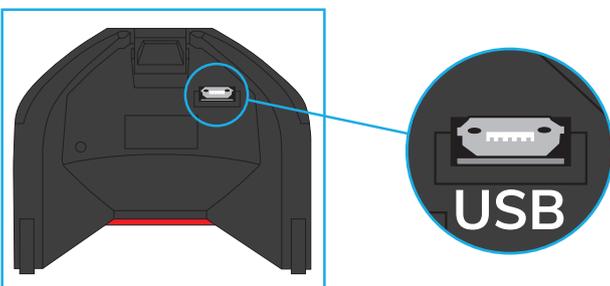

AN- UND AUSSCHALTEN (NUR BEI RECHARGE-VERSION) ON AND OFF (ONLY FOR THE RECHARGE-VERSION)

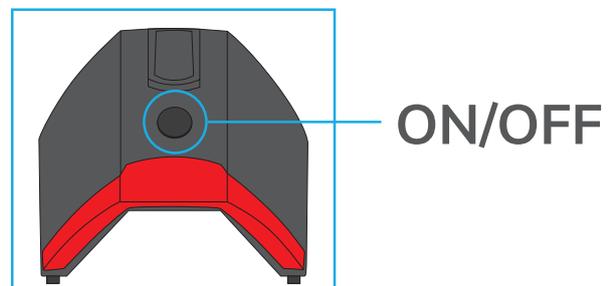

MONKEY LINK

INFORMATION FUNCTION

The connection between the mudguards and the bike can be loosened if subjected to a heavy burden or a firm impact.

- ▶ Never lift the bike by the mudguards.
- ▶ Avoid contact with the mudguards when climbing onto the bike.
- ▶ Please do not attach any extra parts to the mudguard.

MonkeyLink is a connecting system with magnets, a locking mechanism and electric cables. The magnets make the coupling easier when mounting and removing the mudguards.

Not approved for extreme sports or off-road use.

INFORMATION TRANSPORT

Mechanical influences can cause damage to the interfaces or the mudguard during transport.

- ▶ Especially protect the contacts of the mudguards against impacts or other mechanical influences during transport.
- ▶ A subjection to unfavourable loads when being transported on a car bike rack can cause damage to the mudguards. Please remove the mudguards when using a car bike rack for transportation.

High temperatures can cause damage to the interfaces.

- ▶ Protect the mudguards from extreme temperatures. Never place the mudguards on the radiator or the rear window shelf in the car, for example.

Dirt or other environmental influences can cause damage to the interfaces on the bike.

- ▶ Protect the bike interfaces when riding it without accessories by using the following caps:

ML-1 Magnetic Reflector Protection Cap front

ML-1 Magnetic Reflector Protection Cap rear

ML-ChuckProtection

- ▶ Deactivate the light output of your ebike when riding it without accessories.

MOUNTING

- ▶ Each time before commencing with mounting work, inspect the interfaces for signs of soiling or metallic items. If necessary, remove these with a moist cloth, ensuring that the electric system is switched off.
- ▶ Avoid contact with magnetic dust (basalt, metals, etc.) and environments where these substances are processed.

INFORMATION CLEANING

Moisture can cause the interface to short-circuit.

- ▶ Never clean the interfaces with water if the system is live.

High temperatures can cause damage to the interfaces

- ▶ Protect the mudguards against extreme temperatures when drying them.
- ▶ Remove the battery from an ebike.
- ▶ Clean the interface with a moist cloth.

MONKEY LINK RECHARGE-LIGHTING

FRONT



STEM OR HANDLEBAR

ART-NR.

80001
80002
80003
80004
80005
80006
80007
80008
80009
80025



V-BASE
ART-NR.
80026




LIGHTING
ART-NR.

80093
80094
80098

FROM SET
ART-NR.

80090
80091
80092

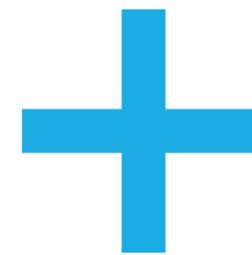

offizieller partner



monkey-link.com

MONKEY LINK RECHARGE-LIGHTING



SEAT CLAMPS

ART-NR.

80030

80031

80032

80033

REAR



V-BASE

ART-NR.


80027



LIGHTING

ART-NR.

80096

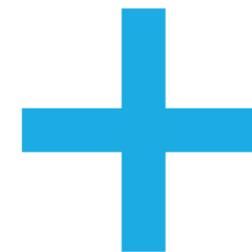

FROM SET

ART-NR.

80090

80091

80092

OR

FENDER

ART-NR.

80060

offizieller partner



monkey-link.com